

## How to find the firmware version of your Toshiba MFD

To check firmware version you will need to print out the 'FUNCTION LIST'.  
To do this:

1. Press the 'USER FUNCTIONS' button on the copier control panel.
2. Select the 'USER' tab and enter admin password.
3. Select 'LIST'.
5. Select 'FUNCTION', this will then print out the 'FUNCTION LIST' page.
6. Check F/W Ver. : **T###SY0E\*\*\***

